


How to measure wheel offsets!

Lay wheel face up on a flat surface. Measure from flat surface to mounting face.


OUTSIDE FACE OF WHEEL

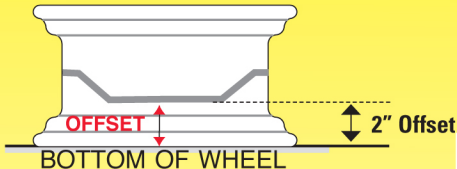

Wheels may not be returned once they have been mounted.

PLEASE measure your wheels accurately using the guidelines we have provided on this page.

OUTSIDE FACE OF WHEEL

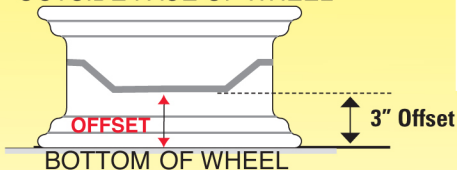

OUTSIDE FACE OF WHEEL

